



 
ADVANTAGEONE

Assembly Instructions


Instructions D'Assemblée
Instrucciones de ensambla

Pencil Drawer


Tiroir à crayons
Cajón de lápiz

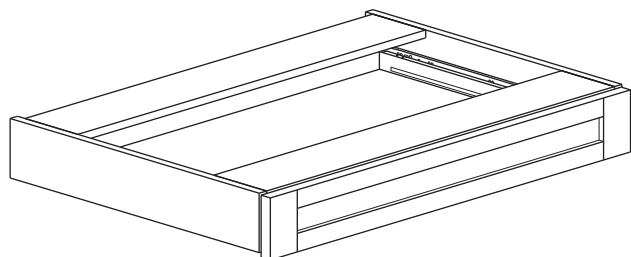

 
1 X LEFT HAND GABLE (SIDE PANEL)
Pignon de main gauche (panneau latéral)
Aguilón de la mano izquierda (panel lateral)

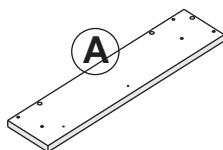


 
1 X RIGHT HAND GABLE (SIDE PANEL)
Pignon droit (panneau latéral)
Aguilón derecho (panel lateral)

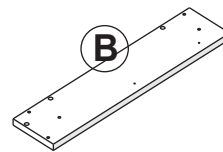

 1 X FRONT RAIL
Rail avant
Carril delantero

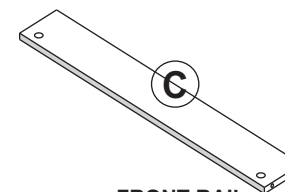


  2 X BACK RAIL
Rail arrière
Carril trasero

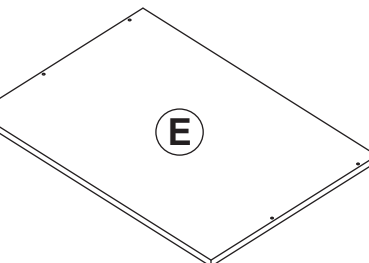
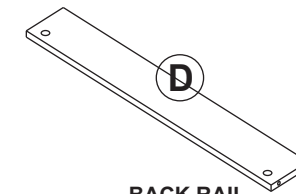


1 X PENCIL DRAWER BOTTOM
Le Fond De Tiroir De Crayon
Fondo Del Cajón Del Lápiz

 1 X DRAWER BACK
Dos de tiroir
Parte posteriora del cajón

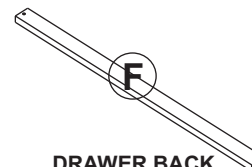

  
1 X DRAWER FACE
Visage de tiroir
Cara del cajón

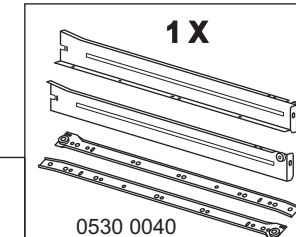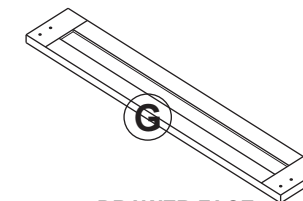


1 X
0530 0040
DRAWER SLIDE
Glissière de tiroir
Diapositiva del cajón

6 X 0540 0005	6 X 0540 0025	6 X 0540 0015	10 X 0540 0035	4 X 0540 0060	1 X 0530 0050	1 X 0530 0055
-----------------------------	-----------------------------	-----------------------------	------------------------------	-----------------------------	-----------------------------	-----------------------------

 
1

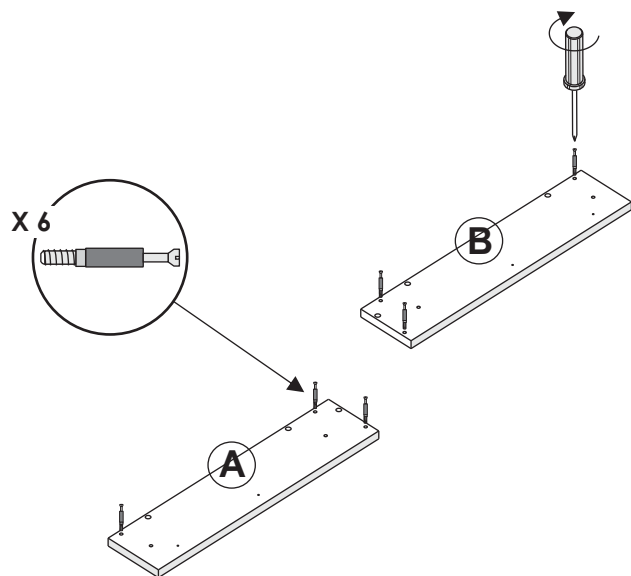


2

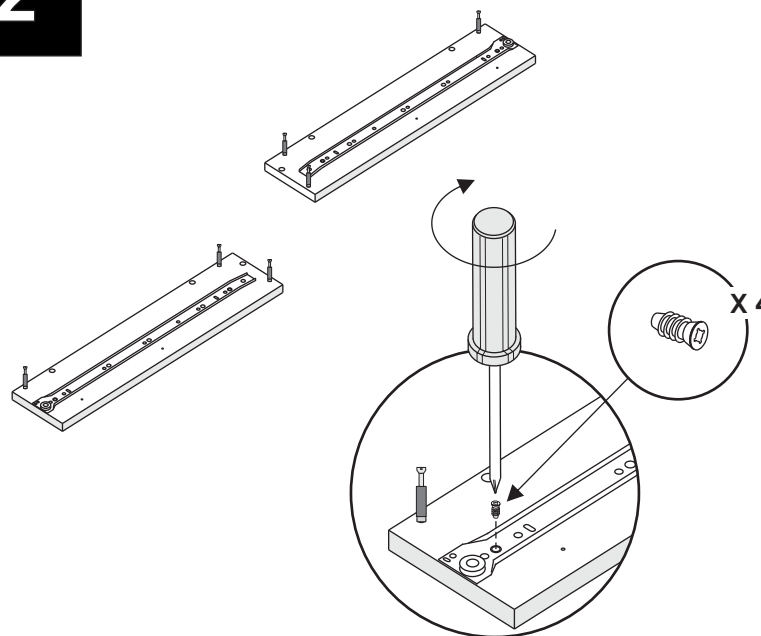 


3

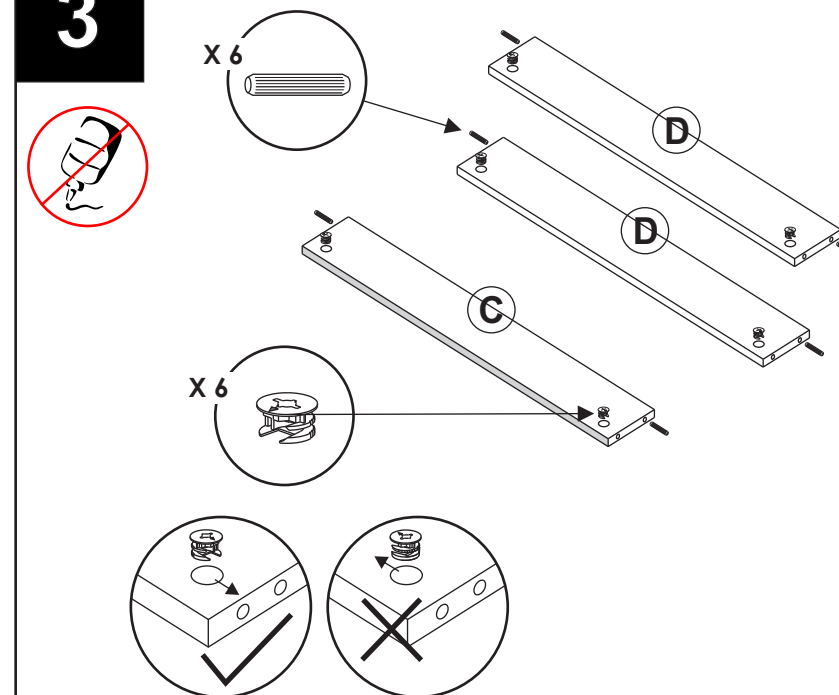 


4

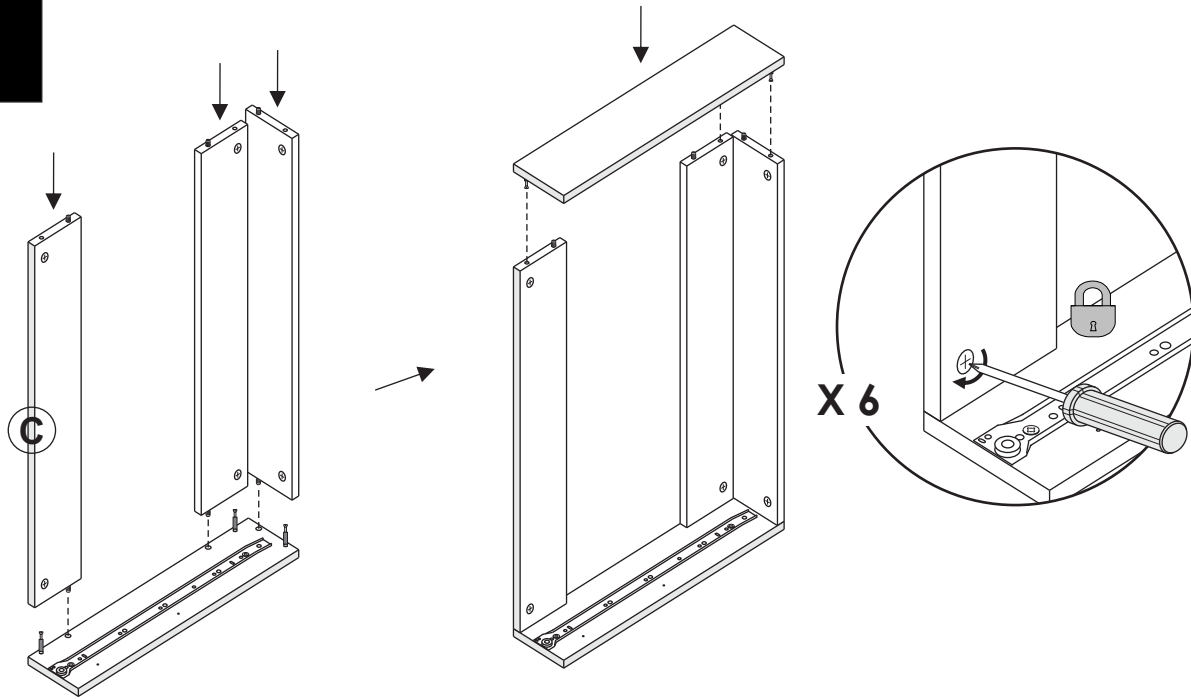 


5

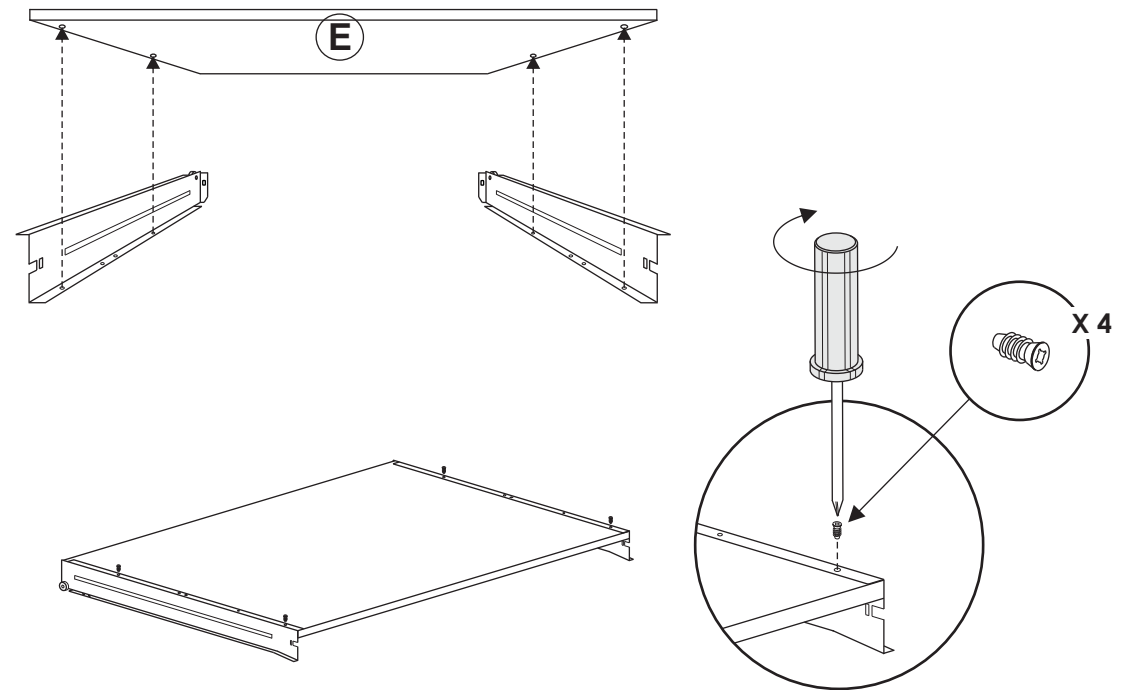 

6

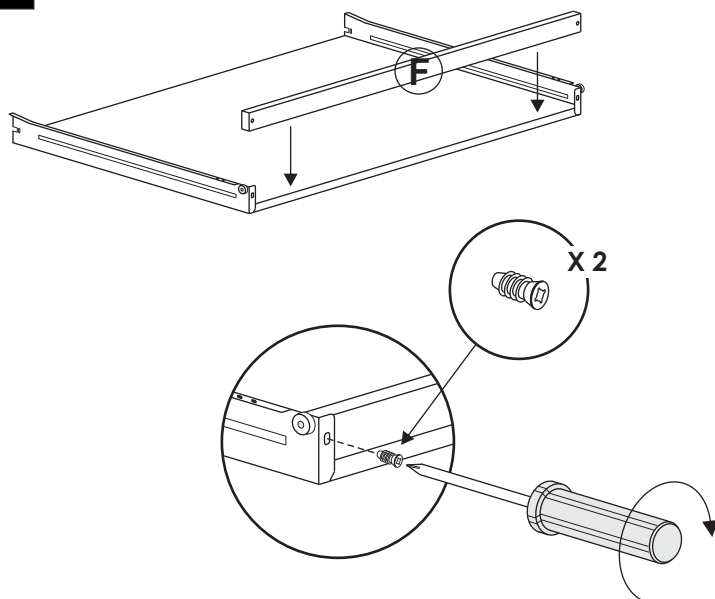 

7

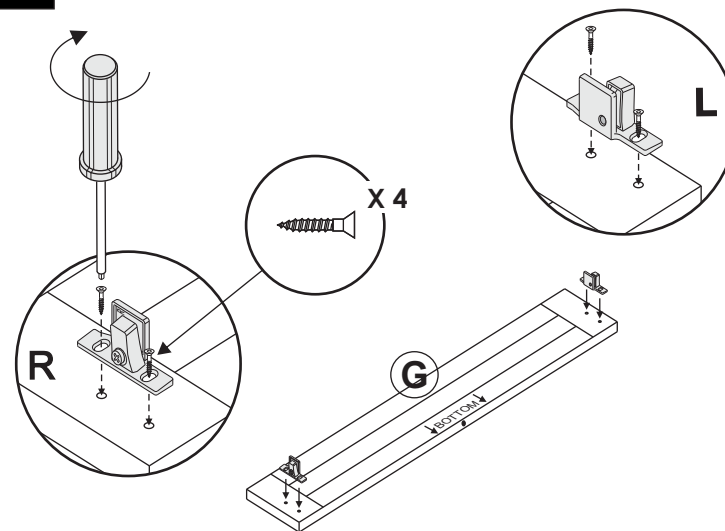 

8

