
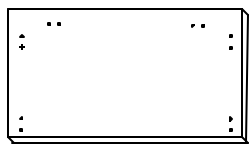
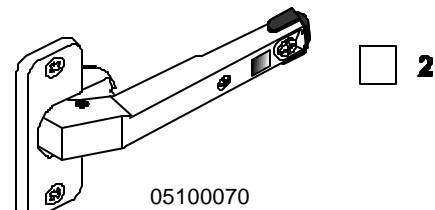
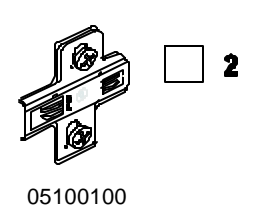

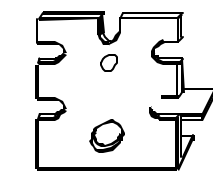

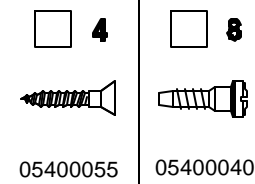
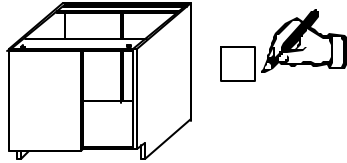



Assembly Instructions

BlindWallCornerPanelKit

BlindBase Corner Panel Kit

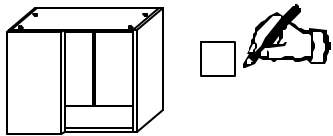

1-A

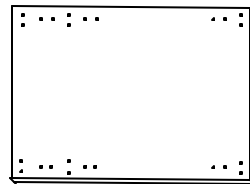


BlindWallPanel

OR

BlindBase Panel

1-B



BACKBOARD


1-C




VINYLDIVIDER

1


C → B

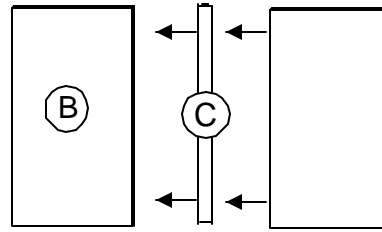


BACKBOARD
FROM
DOORPACK

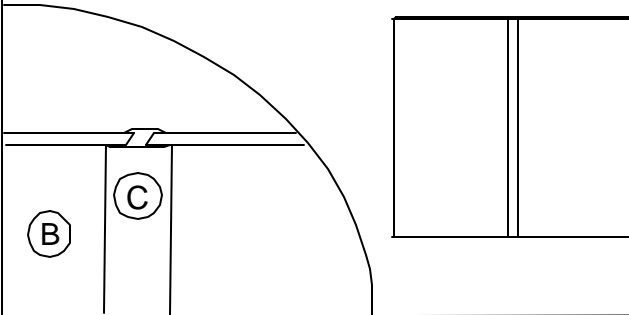


2

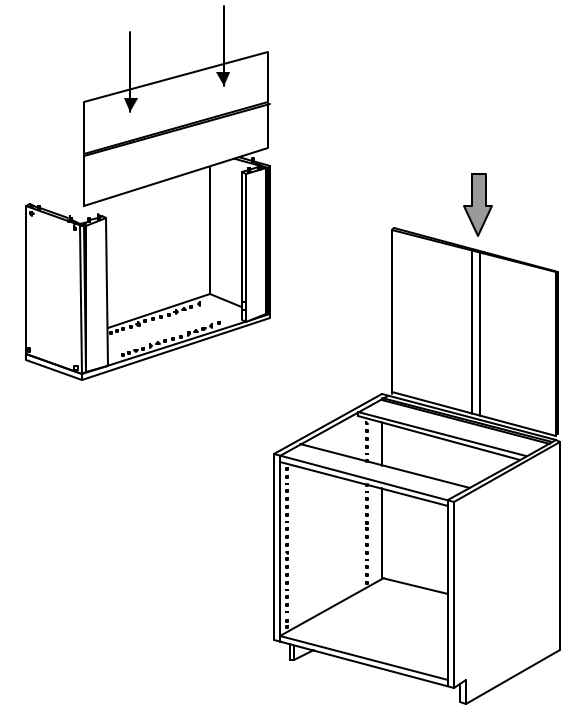

3




BlindWallPanel

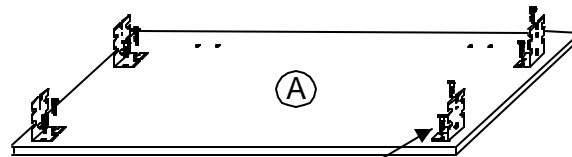




A

BlindBase Panel

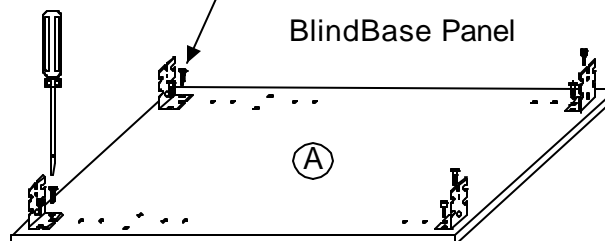


A

4

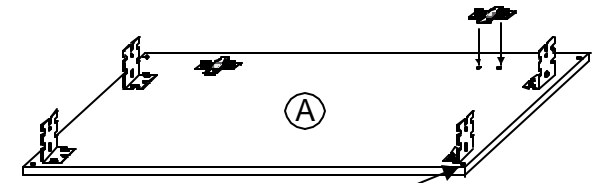


A

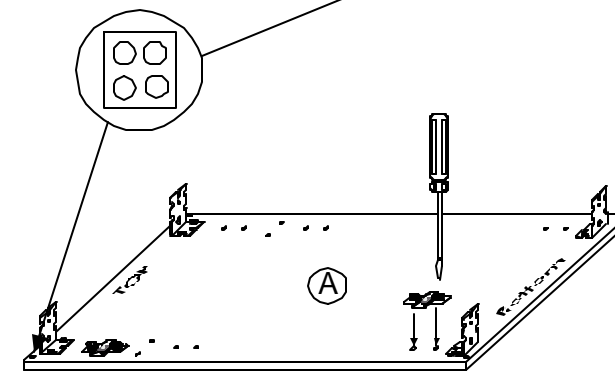

A


5


A → Cab

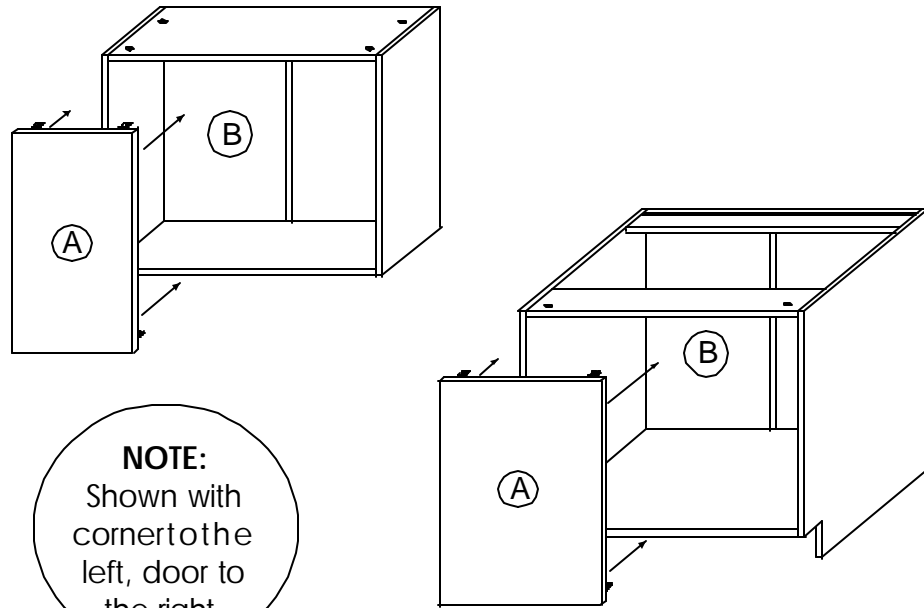


NOTE:
Shown with corner to the left, door to the right.


6

 x 4

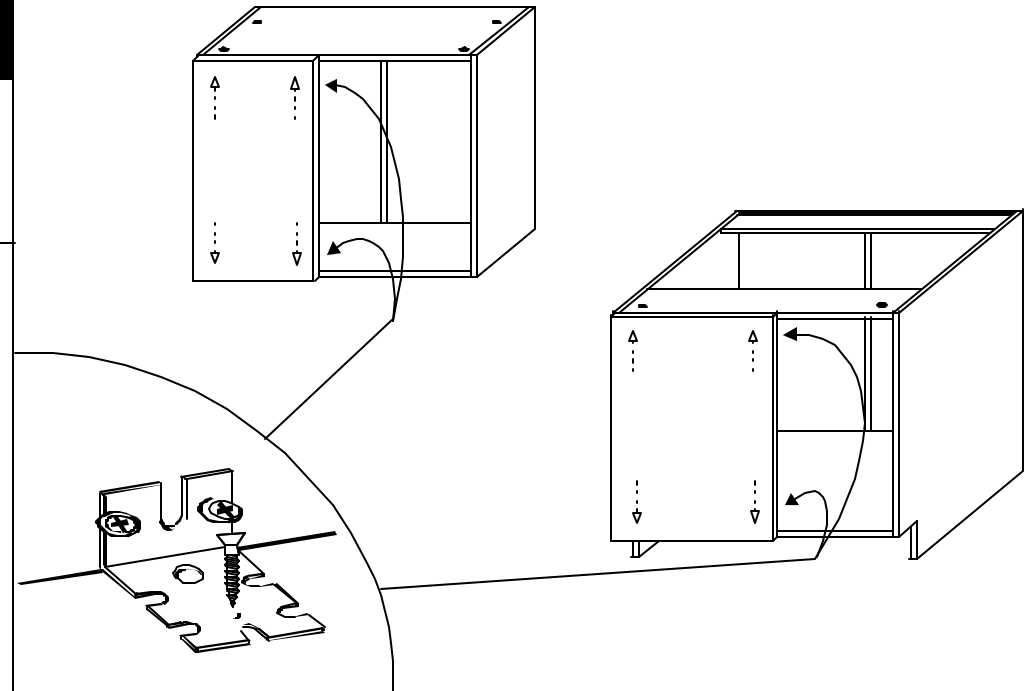

7

 x 2

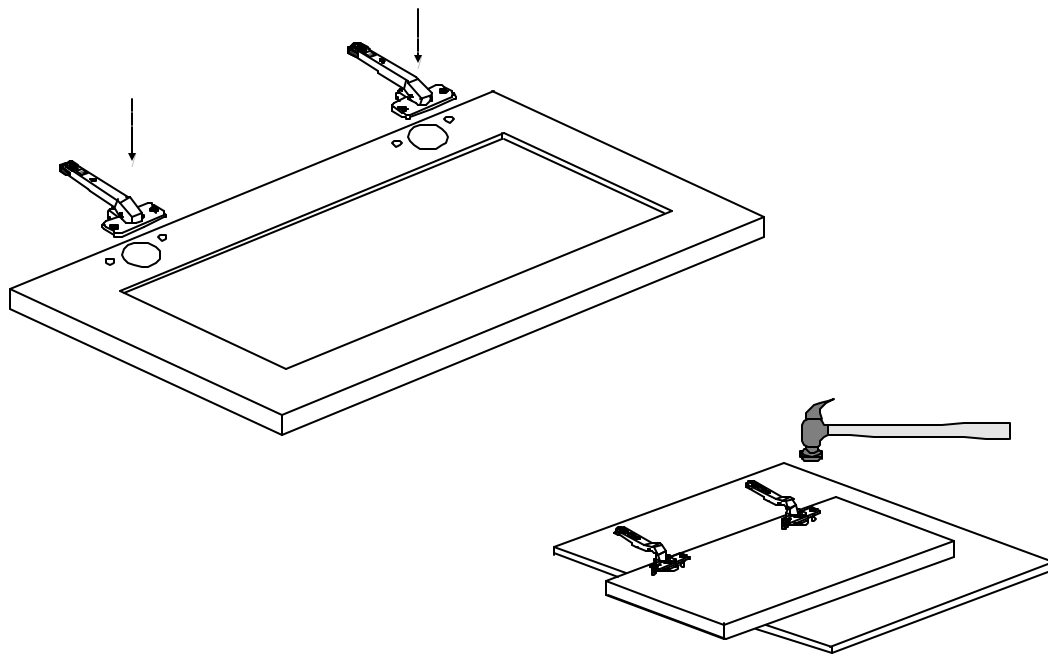

8

