


INSTALLATION TIPS

NON-STANDARD CORNER BASE CABINETS

Euro-Rite offers a non-standard corner base option for versatility when designing a kitchen. You can increase or decrease one side of your corner base 3-6" to accommodate adjoining cabinetry when you just need that few extra inches.

When installing non-standard corner cabinets here are a few things to remember:

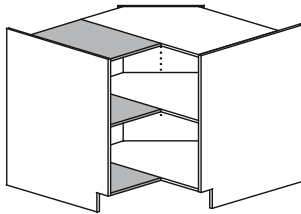

1. The cabinets are not directly mounted to the wall, there is a 5" space between the backboard and the wall
2. You will receive a standard corner base cabinet along with an extension kit. The smaller, standard shelf extension is discarded.
3. The assembly and adjustable shelves are a combination of 2 pieces and are locked together with cam and dowel.
4. The extended side can be either on the left or right side of the cabinet by flipping the shelves.
5. The smaller of the 2 doors is always hinged to the cabinet.

