


Drawers, Doors and Accessories


Available in

Antique White, Grey,
Chocolate Pear or
White

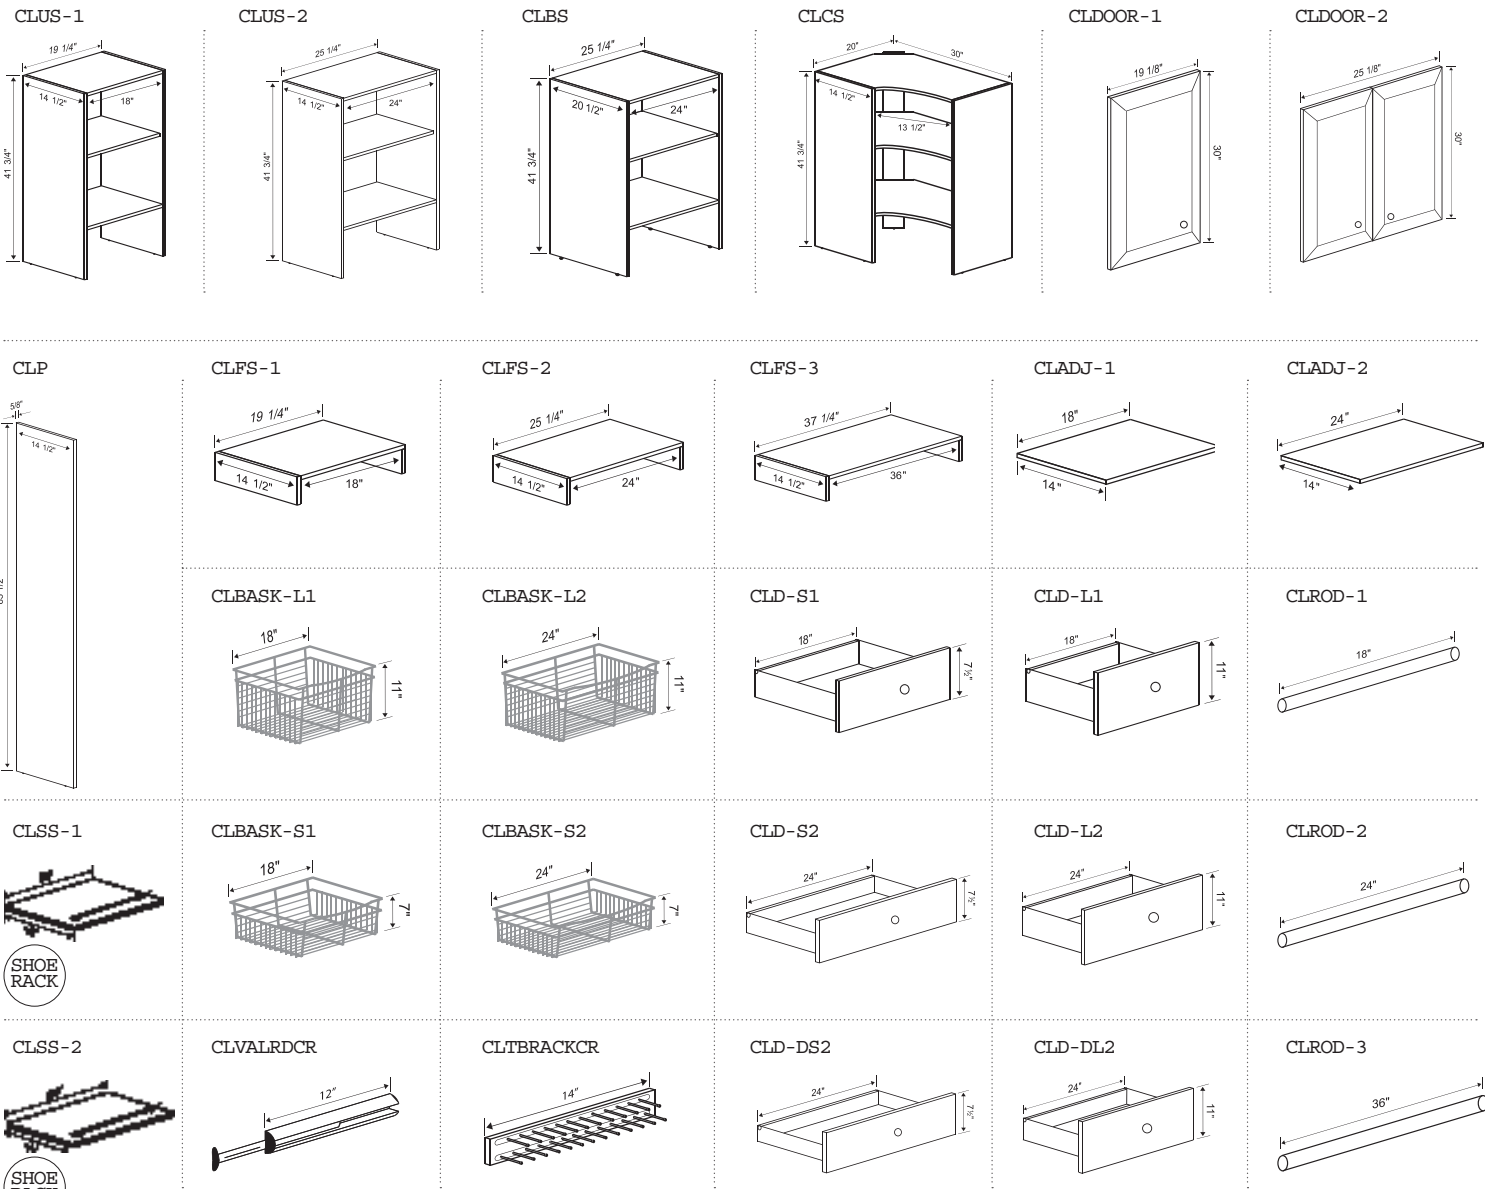


Standard Modules

CLP's shown in white are not included in parts list.




Double Short Hanging
2 CLFS 2 CLROD

Probably the most common in closet organization. Two short hanging rods maximizes hanging space for shirts, blouses, pants and sport coats.




Long Hanging
2 CLFS 1 CLROD

This module is intended for housecoats, long dresses and gowns.

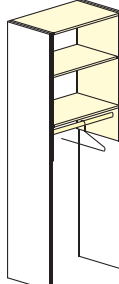


Semi-Short Hanging
1 CLUS 1 CLROD

The hanging length here is ideal for short dresses, pants hung by the cuff and coats. There is still space for folded clothes in the shelving above.

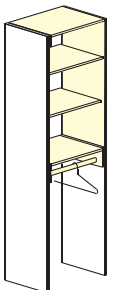


Short Hanging with Shelves Above
1 CLUS 1 CLROD 1 CLFS

A good combination of shelving and short hanging. Folded clothes are easily accessible while still providing space for hanging items.

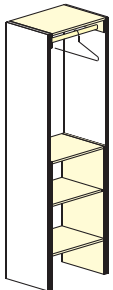

Short Hanging with Shelves Below
1 CLUS 1 CLROD 1 CLFS

A good combination of shelving and short hanging. The shelving provides space for shoes and accessories (like drawers and baskets for clothing items).

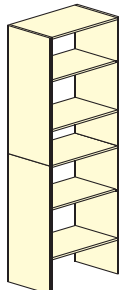


Shelf Tower
2 CLUS

Maximum shelf space for folded clothes. Extra shelves, drawers and baskets can be added. Can also be duplicated with corner and 20" deep units.


Design Grid

Use the grids below to plan and draw your closet layout.

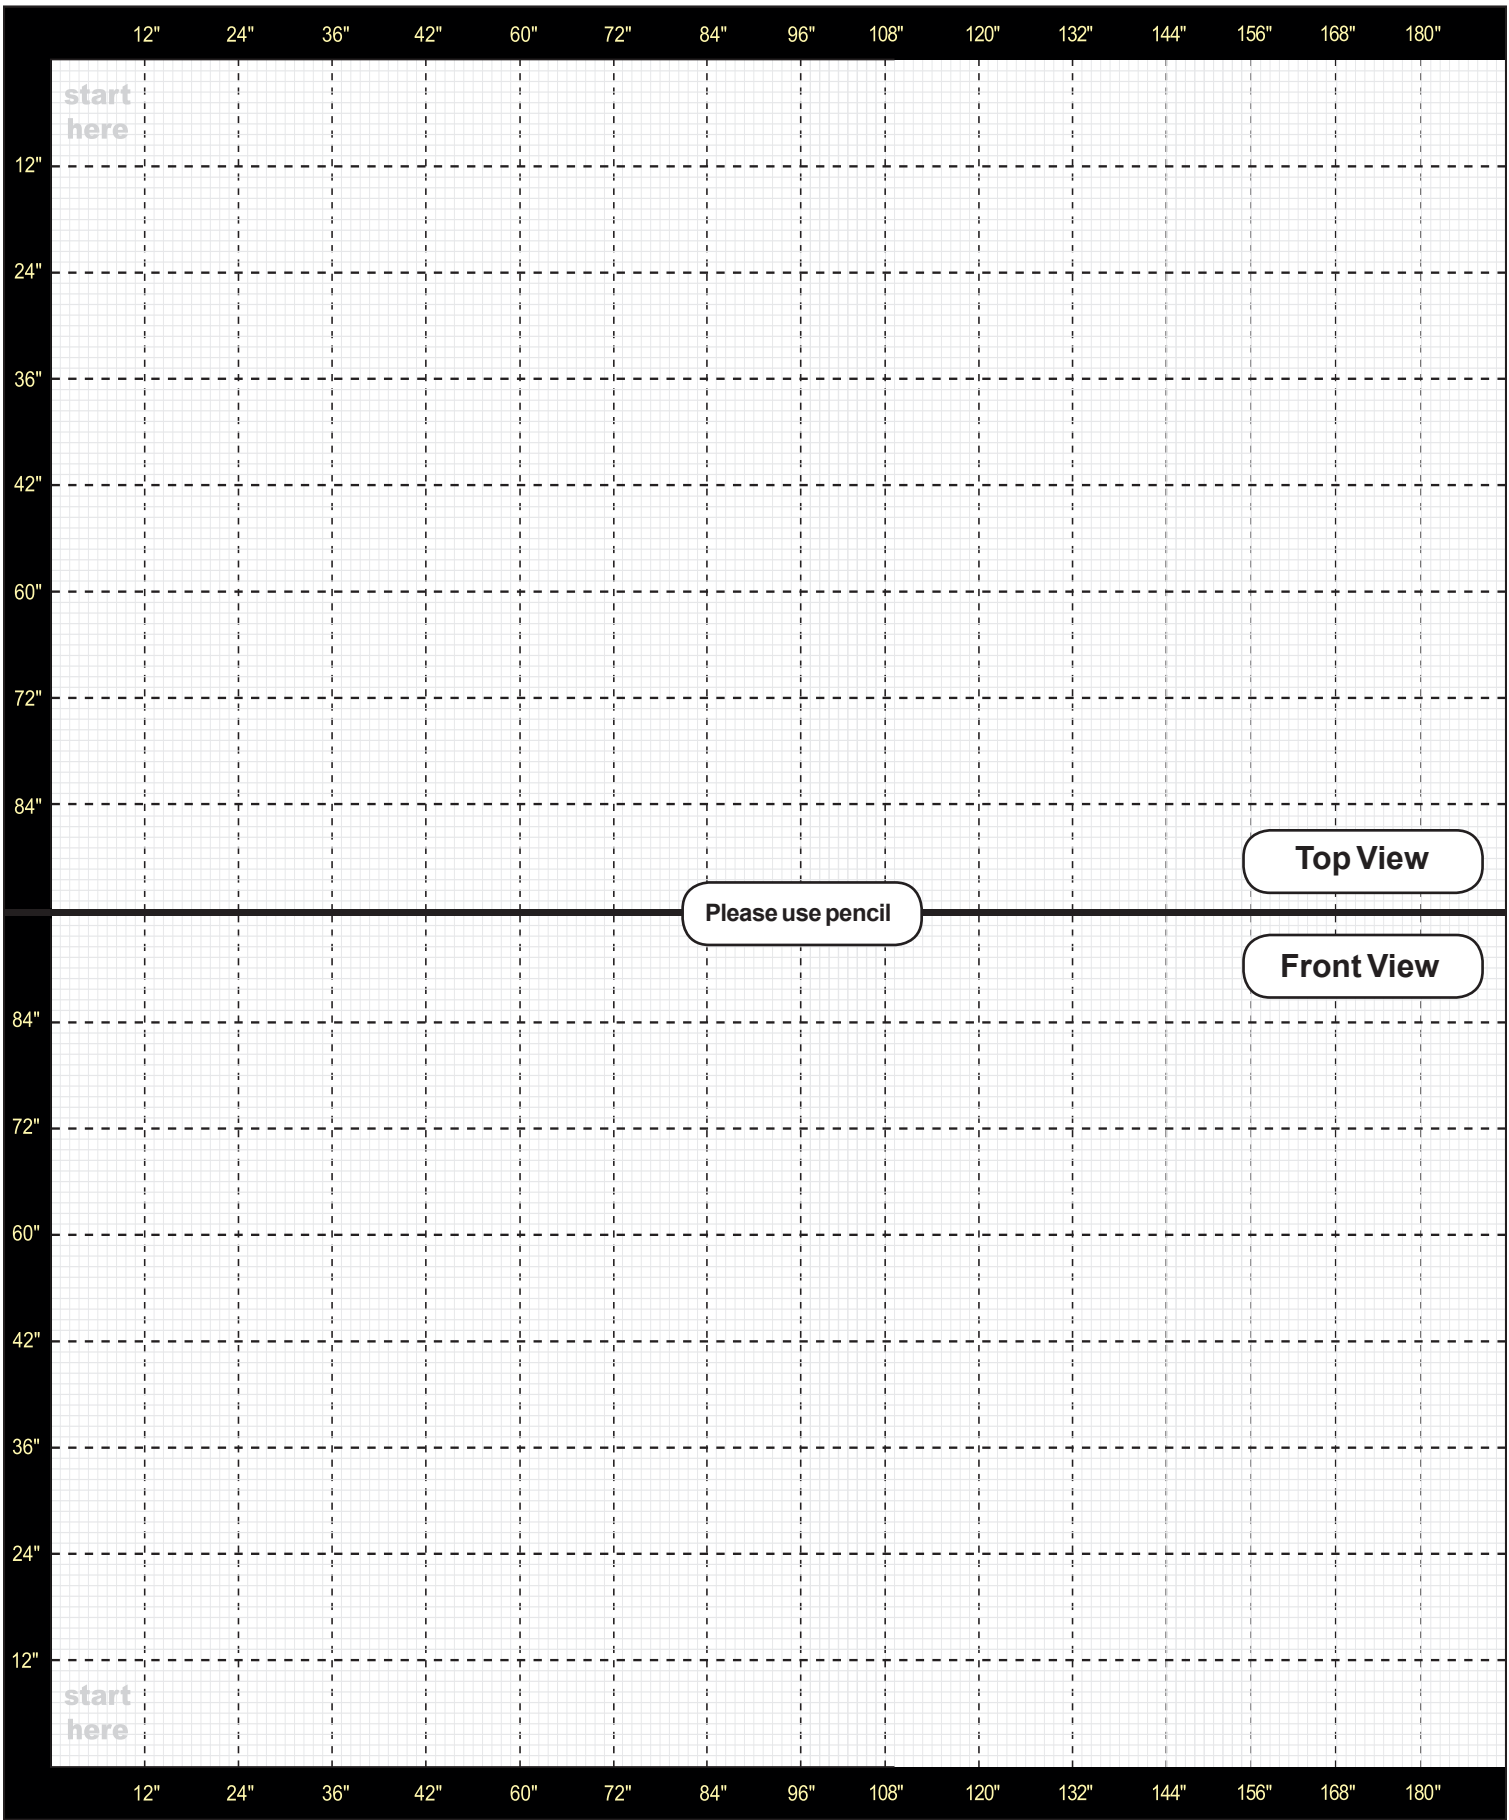

Measuring

Reach-in and Walk-in Closets

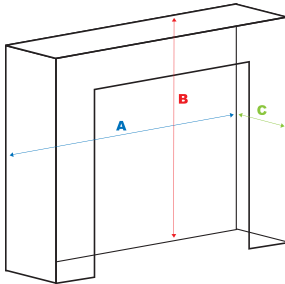

Closet Inside Dimensions

Most Reach-in closets have doors. Either By-Fold or Bi-Pass. Fill out the dimensions according to the door type you have. If your closet has no doors at all, then use the Bi-Fold Section. Return (D1 & D2) will now be to the edge of the opening (if you have a return at all).

Width (A)

Height (B)

Depth (C)

By-Pass Door Opening Dimensions

To measure By-Pass door openings, move doors to the right to get measurement (E1) and then to the left to get measurement (E2). Measurements (D1) & (D2) will be from the inside of the left and right wall to the edge of the door opening.


Return (D1)

Return (D2)

Width (E1)

Width (E2)

Height (F)

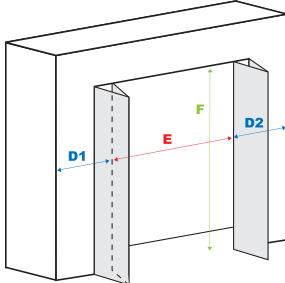

Bi-Fold Door Opening Dimensions

When measuring a Bi-Fold door opening, make sure the doors are resting open. Measurements (D1) and (D2) will be from the inside of the left and right wall to the edge of the door at the opening.

Return (D1)

Return (D2)

Width (E)

Height (F)

Walk-in Closet Inside Dimensions

Width (A1)


Width (A2)

Width (A3)

Height (B)

Return (C1)

Return (C2)

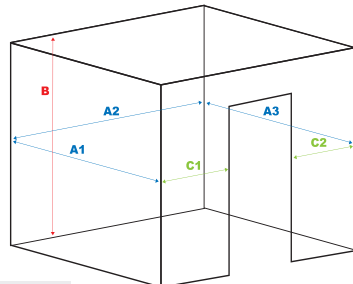

Tip:

It is best to have the closet empty of clothes when measuring. Walls are rarely square, flat or level. When measuring Width (A), it is always best to measure in various places (top,middle,bottom). Take the smallest measurement and subtract 1/2" if it's under 6 feet, 3/4" if it's 6 to 10 feet and 1" if it's over ten feet. This will ensure a problem free fit.

Order Form

COMPONENT	QTY	PRICE	EX. PRICE
CLUS-1			
CLUS-2			
CLBS			
CLCS			
CLFS-1			
CLFS-2			
CLFS-3			
CLP			
CLROD-1			
CLROD-2			
CLROD-3			

Components Subtotal (A)

ACCESSORIES	QTY	PRICE	EX. PRICE
CLADJ-1			
CLADJ-2			
CLTBRACTCR			
CLD-S1			
CLD-S2			
CLD-L1			
CLD-L2			
CLD-DS2			
CLD-DL2			
CLDOOR-1			
CLDOOR-2			
CLBASK-S1			
CLBASK-S2			
CLBASK-L1			
CLBASK-L2			
CLVALRDCR			

Accessories Subtotal (B)


Grand Total (A+B)

DESIGN YOUR OWN CLOSET!

Know the Difference There are 3 different styles of closets: the by-pass door style, bi-fold style, and the walk-in closet. Your closet design will depend entirely on the style of closet you own. Learn the difference and start building your dream closet! Here are a few sample layouts recommended for the different closet styles.


Available in: Grey | White | Chocolate Pear | Antique White

By-Pass Door
Sample Layout

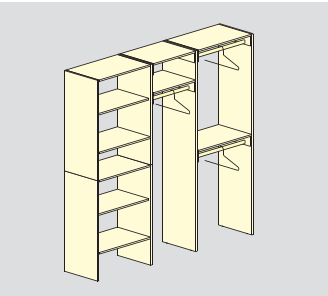


UP TO 6 FEET

2 CLUS-2 2 CLP
4 CLFS-2 3 CLROD-2

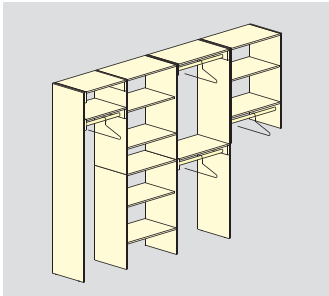

UP TO 8 FEET

3 CLUS-2 2 CLP
2 CLFS-1 1 CLROD-1
2 CLFS-2 3 CLROD-2


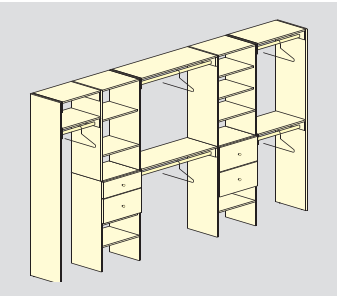


UP TO 10 FEET

4 CLUS-1
2 CLFS-1 2 CLFS-2 2 CLFS-3
2 CLP 1 CLROD-1 2 CLROD-2
2 CLROD-3 3 CLD-11 1 CLD-SL


With the by-pass door style, a shelf tower is most advantageous when placed closer to an end of the closet. This allows easy access to your shelf items when sliding open your closet door. Keep that in mind when designing for by-pass door closets of any size!

Bi-Fold Door
Sample Layout

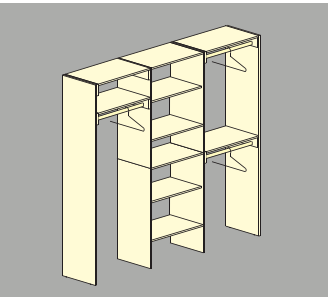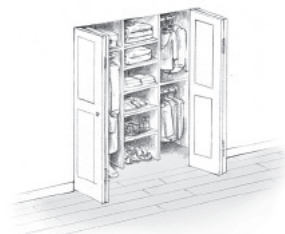


UP TO 6 FEET

2 CLUS-2 4 CLFS-2
2 CLP 3 CLROD-2

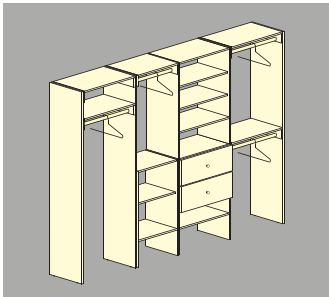

UP TO 8 FEET

1 CLUS-1
2 CLUS-2 1 CLFS-1 3 CLP
4 CLFS-2 1 CLROD-1
3 CLROD-2 2 CLD-L2

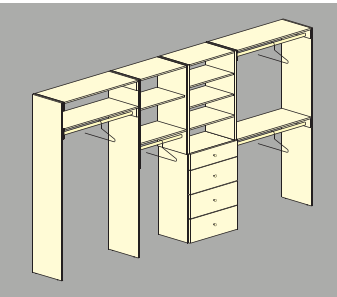


UP TO 10 FEET


3 CLUS-2 4 CLFS-3 3 CLP
1 CLROD-2 1 CLROD-3
3 CLD-L2 1 CLD-S2

Opposite to the by-pass door style, it is best to place shelving closer to the middle of your bi-fold door closet. Heavier items can be tucked away at the two ends of your bi-fold closet while lighter, more frequently used items can be stored in the middle shelving.

Walk-In Closet
Sample Layout

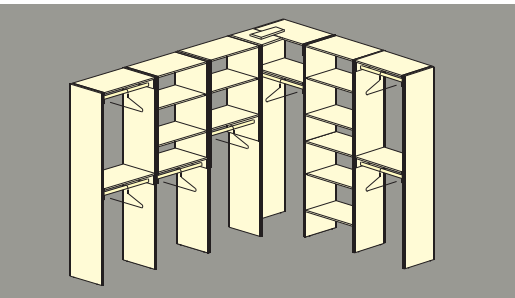

4 CLUS 7 CLROD
8 CLFS 6 CLP

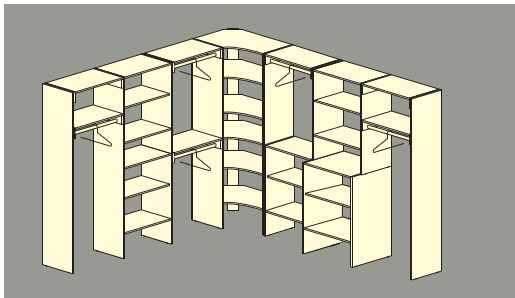

4 CLUS 2 CLP 2 CLCS
7 CLFS 5 CLROD 1 CLBS

Walk-in closets are extremely flexible as to where you prefer to have shelving, so have fun designing your walk-in closet the way you like it! Euro-Rite offers a corner shelving unit for maximum shelf storage space!

Get acquainted with our Closet Program Euro-Rite offers a closet program that is suitable for both contractors and Do-it-Yourself enthusiasts. Our stackable Ready-To-Assemble (RTA) units can be used in a multitude of combinations to increase any closet space. To help get you organized, we offer a variety of accessories, and drawer options.



Kitchens



Bathroom



Closets



Office



Laundry



Entertainment



ADVANTAGE PLUS



www.eurorite.com | 1-888-464-5063